


Measuring Guides

INSIDE MOUNT SHADES

SHADE  LOVE


Step 1

Measure the **inside** width of the window frame, spanning from the inner edge to the inner edge, at three points: the top, middle, and bottom. Then, round down to the nearest $\frac{1}{8}$ of an inch.

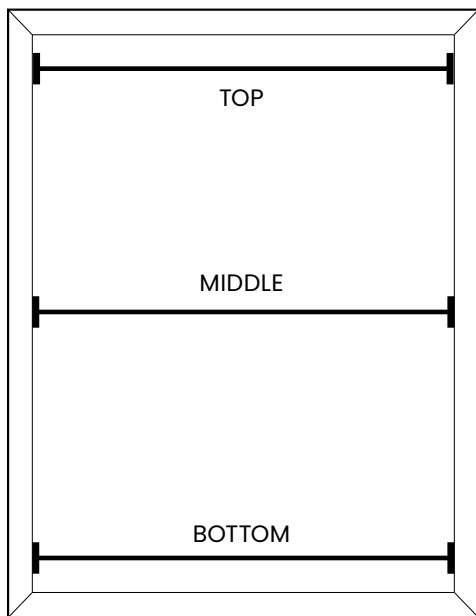

Step 2

Measure the **inside** height of your window from the inner top edge to the inner bottom edge at three points: left, center, and right. Then, round down to the nearest $\frac{1}{8}$ of an inch.

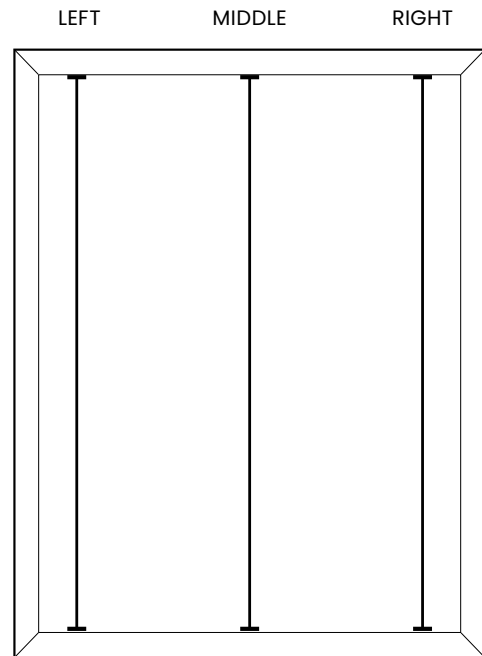

Please note: Windows must be at least 2 $\frac{1}{2}$ " deep to accommodate an inside mount.