

Measuring Guides


OUTSIDE MOUNT SHADES

SHADE  LOVE

Step 1

Measure the **outside** width of the window frame, spanning from the outer edge to the outer edge, at three points: the top, middle, and bottom. Then, round up to the nearest $\frac{1}{8}$ of an inch.

We recommend adding 2-4" to each measurement to ensure your window is fully covered and no light shows through.

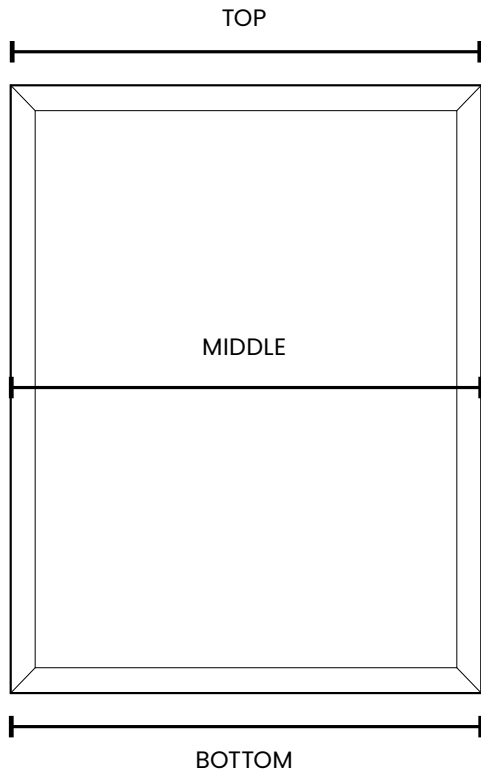

Step 2

Measure the **outside** height of your window from the top edge to the bottom edge at three points: left, center, and right. Then, round up to the nearest $\frac{1}{8}$ of an inch.

For mounting height, measure from top of frame to desired mounting location. We recommend a minimum mounting height of 5-6 inches.

